

# BENDER

## 1973 LONDON

MKIII Tonebender\* Replica

---

### CONTROLS

**VOLUME** - Controls overall output volume.

Left is less, right is more.

**tone** - Controls the brightness of the sound. Left is darker, right is brighter.

**ATTACK** - Acts as a fuzz control. This is the same name that the original fuzz control had. Left is less, right is more.

### SWITCHES

**MODE** - This is our modification to the circuit. It engages a slightly higher volume sound with more mids.

### JACKS

**INPUT** -If you are looking at the jacks from above the pedal, the input is on the right.

**OUTPUT** - If you are looking at the jacks from above the pedal, the output is on the left.

### POWER

Uses 9V DC Negative Center. Do not use more than 9V DC, or your warranty will be voided. The Bender does allow for battery operation via a single 9V battery. Just loosen the two rear screws from the enclosure and the backplate will swing open. On the inside you will see a battery clip to install the battery into. Have fun!

**JHS PEDALS**