



MORNING GLORY V4

JHS PEDALS

Transparent low/medium gain overdrive that never gets in the way. The overdrive you've always wanted but could never find.

Controls

VOLUME - Controls the output volume.

DRIVE - Controls the amount of drive or gain just like a tube amp being cranked at high volumes. You will notice that as you turn up the drive, it also adds brightness.

TONE - Controls the amount of brightness. Right is brighter, left is darker.

GAIN TOGGLE - Engages higher gain mode when flipped up. The LED will turn red to indicate that you are in the higher gain mode.

POWER - Uses 9V DC Negative Center. Do not use more than 9V DC. Your warranty will be voided.
100mA max consumption.

Jacks

RED REMOTE JACK - The upper jack on the right side of the pedal is for a JHS "Red Remote" switch. Using this switch you can toggle between the higher gain mode and the standard mode on the fly.

INPUT - Lower jack on the right side of the pedal.

OUTPUT - Jack on the left side of the pedal.

BRIGHT CUT SWITCH - Switch on the right side of the pedal that cuts the highest frequencies in case the overall tone is too bright.