

MOOER

TRIANGOLO

Digital Tremolo Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V DC, ⊕ ⊖ ⊖, center negative. Unplug the AC power adapter when not in use or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

FCC certification


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

Main Features

- High quality digital tremolo
- 3 selectable wave forms
- Tap tempo functionality
- 5 different sub division values
- Full metal housing
- True bypass switching

Pedal layout

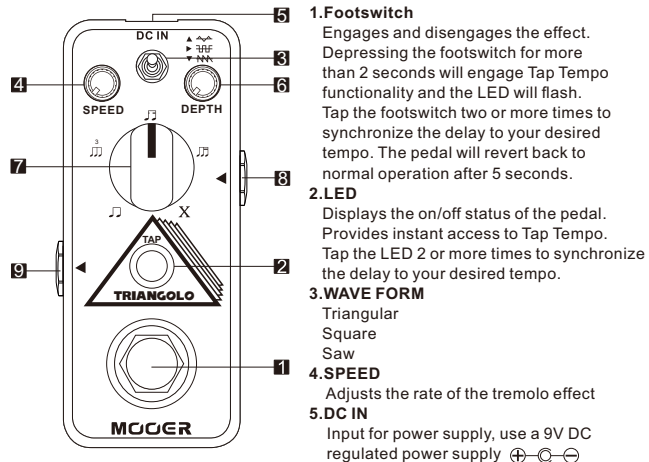

- 1. FOOTSWITCH**
Engages and disengages the effect. Depressing the footswitch for more than 2 seconds will engage Tap Tempo functionality and the LED will flash. Tap the footswitch two or more times to synchronize the delay to your desired tempo. The pedal will revert back to normal operation after 5 seconds.
- 2. LED**
Displays the on/off status of the pedal. Provides instant access to Tap Tempo. Tap the LED 2 or more times to synchronize the delay to your desired tempo.
- 3. WAVE FORM**
Triangular
Square
Saw
- 4. SPEED**
Adjusts the rate of the tremolo effect
- 5. DC IN**
Input for power supply, use a 9V DC regulated power supply ⊕ ⊖ ⊖

- 6. DEPTH**
Adjusts the depth and prominence of the tremolo
- 7. SUB DIVISION**
Selects the sub division rhythm value relative to the tap tempo
X is a random sub-division pattern
- 8. Output jack :**
1/4" audio jack, effect output for connection to amp or other devices
- 9. Input jack :**
1/4" audio jack for connecting to the input device or instrument

Specification

Modes : Tremolo effects with tap tempo functionality.
Input : 1/4" mono audio jack. (Impedance: 470k Ohms)
Output : 1/4" mono audio jack (Impedance: 100 Ohms)
Power requirements : AC adapter 9V DC , center negative. Highly recommend to use Moorer Micro Power.
Current Draw: 160mA
Dimensions : 93.5mm(D) x 42mm(W) x 52mm(H)
Weight : 146g
Accessories : Owner's Manual

** Disclaimer: Any specification's update won't be amended in this manual.*