

Hustle Drive

Distortion Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (+/-10%) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems.

Unplug the AC power adapter when not using or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into this unit.

Take care not to drop the unit, and do not subject it to shock or excessive pressure.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth.

Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

Main Features


- Ultrawide dynamic range and extraordinary open tube-like drive sound
- 2 Working Modes: HP/LP
- Full metal shell
- Very small and exquisite
- True bypass
- DC 9V Adapter power supply

Effects Explanation

HP: High peak mode, boost up the bottom-end, when increasing distortion by Drive knob, you will get more volume and a slight increase in high-mid range (around 3.5KHz).

LP: Low peak mode, color up extreme little to the original sound, very nice for clean boosting.

Panel Instruction

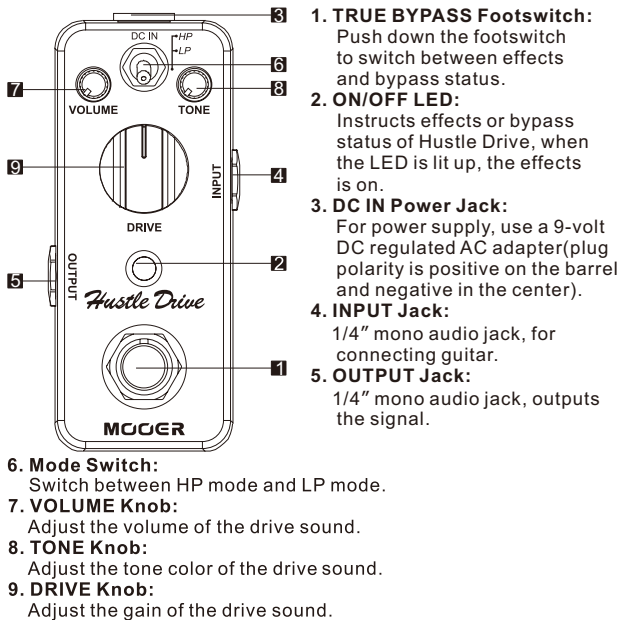

Specification

Effects Modes: 2 (HP, LP)

Input: 1/4" monaural jack (impedance: 470k Ohms)

Output: 1/4" monaural jack (impedance: 1k Ohms)

Power Requirements: AC adapter 9V DC (center minus plug)

Current Draw: 6 mA

Dimensions: 93.5mm (D) × 42mm (W) × 52mm (H)

Weight: 150g

Accessories: Owner's Manual

* Disclaimer: Any specification's update won't be amended in this manual.

MOOER

Hustle Drive

失真单块

用户手册

注意事项

使用前请仔细阅读

电源供应

请使用正确的交流电源插座连接电源变压器。
 请使用内负外正的9V(+/-10%)电源变压器，最大工作电压不得超过12V，否则将会导致设备损坏，着火或者其他问题。
 不使用时或雷雨天时请拔下电源。

连接

连接设备或断开连接前，请务必关闭电源及其它设备，这将有助于避免故障和损坏其它设备。另外，要确保移动本机前断开所有的连接线和电源线。

放置场所

为防止变形、变色，及其它严重损坏，请避免以下情况：

- 阳光直射
- 磁场
- 多尘或不洁的地方
- 强烈震动或摇晃
- 热源
- 高温潮湿
- 湿度较大

电音干扰

在使用本机时，收音机和电视机可能会造成干扰。使用本机时要远离收音机和电视机。

清洁

请用干燥柔软的布清洁本机。如有必要，可用稍微湿润的布。切勿使用粗糙的清洁粉、酒精、涂料稀释剂、蜡、溶剂、清洁剂及化学试剂等浸渍抹布。

操作

请勿用蛮力使用开关及控制元件。
 请勿让纸屑、金属制品及其它物体落入机内。
 注意不要掉落，不要使其受到冲击及过度压力。

性能概述


- 两种工作模式：HP/LP
- 全金属外壳
- 外观小巧精致
- 纯直通设计
- 9V电源供电

模式说明

HP: High Peak模式，增强低频，当增益增大时，音量会变大且中高频会得到一定提升(3.5kHz左右)。

LP: Low Peak模式，对原始信号进行极小的染色，出色的Clean Boost。

面板说明

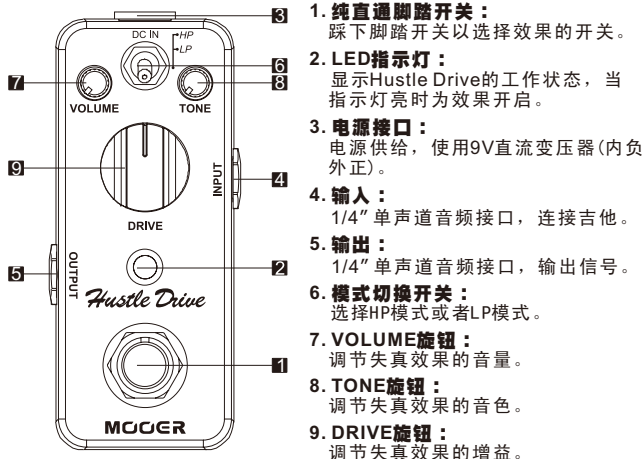

1. **纯直通脚踏开关：**
 踩下脚踏开关以选择效果的开关。

2. **LED指示灯：**
 显示Hustle Drive的工作状态，当指示灯亮时为效果开启。

3. **电源接口：**
 电源供给，使用9V直流变压器(内负外正)。

4. **输入：**
 1/4"单声道音频接口，连接吉他。

5. **输出：**
 1/4"单声道音频接口，输出信号。

6. **模式切换开关：**
 选择HP模式或者LP模式。

7. **VOLUME旋钮：**
 调节失真效果的音量。

8. **TONE旋钮：**
 调节失真效果的音色。

9. **DRIVE旋钮：**
 调节失真效果的增益。

技术参数

效果模式： 2 (HP, LP)

输入： 1/4"单声道音频接口(阻抗: 470k Ohms)

输出： 1/4"单声道音频接口(阻抗: 1k Ohms)

电源供给： 9V直流变压器(内负外正)

工作电流： 6 mA

尺寸： 93.5mm (D) × 42mm (W) × 52mm (H)

重量： 150g

附件： 用户手册

*免责声明：参数更新恕不另行通知。