

# WESTMINSTER EFFECTS MIDI GUIDE

## Setting MIDI Channels on Your Westminster Effects Pedal

Your pedal is preset to operate on MIDI Channel 1, with all DIP switches in the down/off position. To use the pedal's MIDI capabilities on other channels, follow the guide below to configure the DIP switches.

Each combination of switch positions corresponds to a specific MIDI channel. The white squares in the diagrams represent the up/on position of the switches. Power cycle your pedal to apply new settings. Use a 3.5mm TRS MIDI cable in the jack on the left side of the pedal.

**MIDI Commands and Values:** CC#0; 0-126 (Effect Off); 127 (Effect On)

