

JHS

3 SERIES

GLITCH DELAY

GLITCH - Full counterclockwise is off and the pedal behaves as a standard delay. Turning clockwise increases glitch probability, up to 50%, with the LED flashing on each glitch event.

TIME - Sets the delay time, 20ms (CCW) to 980ms (CW).

REPEATS - CCW is a single repeat, CW is infinite repeats. An internal limiter keeps repeats smooth and controlled. *Note: engaging Glitch adds unpredictability and can cause repeats to dissolve.*

MIX - Toggle sets the delay level relative to the unaffected dry signal. Down is 35% delay level, up is 80%..

JACKS

INPUT – 1/4" jack, right side.

OUTPUT – 1/4" jack, left side.

POWER – 9VDC center negative, 65mA. Do not exceed 9VDC or the warranty is void.