





Dynamic Rate, Δ_R : use the RATE control to set the maximum rate. Set SHAPE control to sine wave  for a smooth ride.



Dynamic Depth, Δ_D : use the DEPTH control to set how deep the volume drops. Square wave  for a modern punchy sound.



Harmonic Mode, $\Sigma_{s,T}$, With Reverb: Use the SHAPE/REVERB control to give ambient depth to a swirling, dual filter Tremolo



9VDC 60mA Center Negative Power Supply Required



EDMOND, OKLAHOMA

1-866-8GO-RKFX WWW.RKFX.COM



DYNATREM

DynaTrem is something familiar, but in a way you've never before experienced. This is a Dynamic Tremolo. It responds to your playing attack and the volume of your notes, and changes as the notes decay. Add swirling harmonics with hints of phase, vibe and reverb and you have the new Keeley DynaTrem.

Tremolo made inspiring and creative.

CONTROLS

MODES:

ΔR

Dynamic
Rate

ΔD

Dynamic
Depth

$\Sigma_N T$

Harmonic
Tremolo

DEPTH: Controls how deeply the Tremolo affects the volume.

RATE: Controls the speed of Modulation

SHAPE/REVERB: Essentially a 4 way switch: Ramp Up, Sine, Ramp Down, or Square. Go full counter clockwise for classic triangle wave trem.

REVERB LEVEL - Harmonic Tremolo Mode Only

LEVEL: Controls output level of pedal.

Crank it up for a little gain or dirt!

DYNAMIC RATE

ΔR

In this mode the DynaTrem will use your guitar level to calculate the rate of tremolo. The louder you play, the faster the rate. You adjust sensitivity

with the RATE control. The DEPTH control acts as normal.

DYNAMIC DEPTH

ΔD

In this mode the DynaTrem will use your guitar level to calculate the depth of tremolo. The louder you play the deeper the volume swing.

You adjust the sensitivity with the DEPTH control. The RATE control acts as normal

HARMONIC TREMOLO

$\Sigma_N T$

In this mode the DynaTrem produces a warm sounding phase or vibe type vibrato using dual filters like some rare vintage tube amps. In this mode the

SHAPE/REVERB control becomes the REVERB level, like that of a spring reverb tank on your amp. Turn off the DEPTH to use as a reverb only pedal!