

**TONE:**

Controls tone, right for more treble.

**DRIVE:**

Controls Drive or Gain of Overdrive.

**LEVEL:**

Controls output level of pedal. Turn up above unity for an added boost effect

**MODE SWITCH:**

Selects Hi or Lo gain mode.



*Red Dirt*  
OVERDRIVE

**EFFECT TYPE:**

Overdrive

**Power Requirement:**

9V Battery or 9VDC Center  
Negative Power Supply Required

**Input/Output:**

Mono Instrument In,  
Mono Instrument Out