MODE SWITCH:

Left for Overdrive, Right for Fuzz.

TONE CONTROL

GAIN / FUZZ



EFFECT TYPE:

Overdrive / Fuzz

Power Requirement:

9V Battery or 9VDC Center **Negative Power Supply Required**

Input/Output:

Mono Instrunment In, Mono Instrument Out



Controls output level of the pedal. Turn up above unity for added boost effect.



